

SylvanSport GO Camper Set Up

Raising the Tent Pod

- Detach GO from vehicle and level front to back using the dolly jack.
- Level left and right using stabilizer jacks (BAL leveler may be necessary terrain is very unlevel).
- Remove 4 pins to release the equipment rack.
- Raise the equipment rack/tent pod with the crank handle.
- Insert the 4 bed support poles into place.
- Remove the velcro straps around the front and back of the bed platforms.
- Grab the bed platform by the center weld, raise up and over the pins and insert the support poles into the platform. Twist them a half turn to ensure they are locked into place. Repeat on the other side.
- Lower the tag holder to convert into the entry step
- Place the Picnic Pad/Deck Cushion on the diamond plate deck.

Setting Up the Tent

- Open the bottom of the tent pod by pulling the cable release handle.
- Push the bottom of the tent pod all the way back until it is resting against the back of the storage box.
- Turn the crank handle counter-clockwise about 1 revolution to lower the rack (just enough to lock the back wall in place).
- Pull the 4 black nylon loops of the tent over the corner pins of the bed platforms.
- Attach all of the plastic hooks to the GO frame to secure the tent.
- Insert the 2 grey tent poles through the pole sleeves on both sides of the GO and insert the tips in the grommets.
- Insert the 1 orange vestibule pole through the sleeve over the door and insert the tips into the holes in the bed platform.

Setting Up the Interior

- Remove the 2 bed panels from the bungee on the back wall and place the ends in the sleeves on both sides of the GO to create a solid surface on the bed platforms.
- Unzip the ceiling panel, pull down the 2 green sleeping pads, open both valves on each pad, and place on the bed platforms, allowing them to self inflate. Close the valves after fully inflated.
- Unlatch the clasp on the 2 white table panels, push up to raise them off the pin, flip the bar out of the way, and lower towards the back wall.
- If creating a table setup, unlatch the top and remove 1 table panel, relatching the second panel.
- Raise the 2nd panel back into the ceiling area, relatch, and zip the ceiling panel closed.
- Remove the black knob on the back wall.
- Attach one of the black ratchet straps to the nylon loop on at the top of the back wall with the ratchet mechanism near this end.
- Place one end of the table panel where the knob sits and attach the other end to the hook of the ratchet strap.
- Secure the table panel to the wall with the black knob, only tightening one or two turns.
- Level table panel with ratchet

Packing Up

- Follow the steps in reverse order to pack up the GO.