GOzeebo Instructions






You should have:

- 1 GOzeebo Bag
 - 1 GOzeebo
 - 1 Pole Bag (rolled inside GOzeebo)
 - 2 Grey Poles
 - 4 Orange Poles
 - 1 Stake Bag (rolled inside GOzeebo)
 - 8 Stakes
 - 8 Orange Cords
 - 2 Accessory Bungees

If you ordered a Breezeway Adapter, you should also have:

- 1 Breezeway Bag
 - 1 Breezeway Adapter
 - 1 Awning Adatper

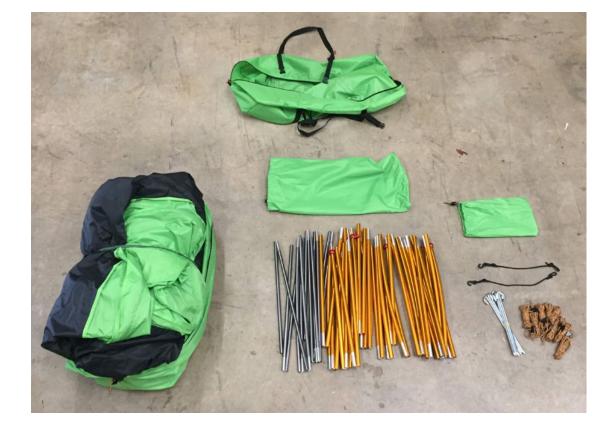

GOzeebo Instructions Setup



Step 3: Slide the two grey poles through the top cross sleeves with grey webbing, and the four orange poles through the four arch sleeves with orange webbing so that the red plugs are exposed in the gaps between the sleeves.

Step 4: Put the ends of the two grey poles into the red plugs for each of the four arches.



Step 1: Open GOzeebo bag and unfold the GOzeebo so the black base is facing down and the silver clips are in the corners.

Step 2: Locate the pole bag and extend the two grey poles and all four orange poles.





Step 5: Plug the eight silver corner clips into the ends of the orange poles.

Step 6: Stick four stakes through four corner loops and into the ground.

GOzeebo Instructions Additions



To attach GOzeebo to SylvanSport GO using Breezeway (all sold separately):

Position the GOzeebo about 5 feet away from your GO, and zip the Breezeway onto the GO vestibule, and onto any of the four GOzeebo sides. Tighten and position.

To tie down the GOzeebo in case of high winds:

Step 1: Run the eight orange cords (in stake bag) through the loops on the upper portion of the GOzeebo and tie them in place.

Step 2: Use the black tightener to tighten or loosen the cords and loop them around the four additional stakes (two per stake).





To attach a GO Awning (sold separately/with SylvanSport GO):

Simply zip awning onto any side of the GOzeebo, insert the awning pole, and stake down as usual. If you have an older model awning, you will need to use the Awning Adapter which comes with the Breezeway (narrow zipper strip).